


# How do I link cartridges in Design Space?


Cricut Explore and Cricut Maker machines were designed to work with Design Space, our free, easy-to-use design software. But you can still use your Physical Cartridge content with these machines in Design Space. It's easy to link your cartridges to your account through Design Space using your Cricut Explore machine or a Cartridge Adapter. Follow the step-by-step instructions below.

**Note:** Cartridges cannot be linked through the Cricut Design Space iOS or Android app at this time. You will need to link your cartridges using Design Space on a laptop or desktop computer. For best results, please connect your machine to the computer via USB cable.


1. Sign in to [Design Space](#) on a Windows or Mac laptop or desktop computer.
2. Ensure that your Cricut Explore machine is powered ON and connected to your computer via USB cable, or insert the Cartridge Adapter into a USB port on your computer.
3. Select **Link Cartridges** from the Account Menu in the upper left corner of Design Space.

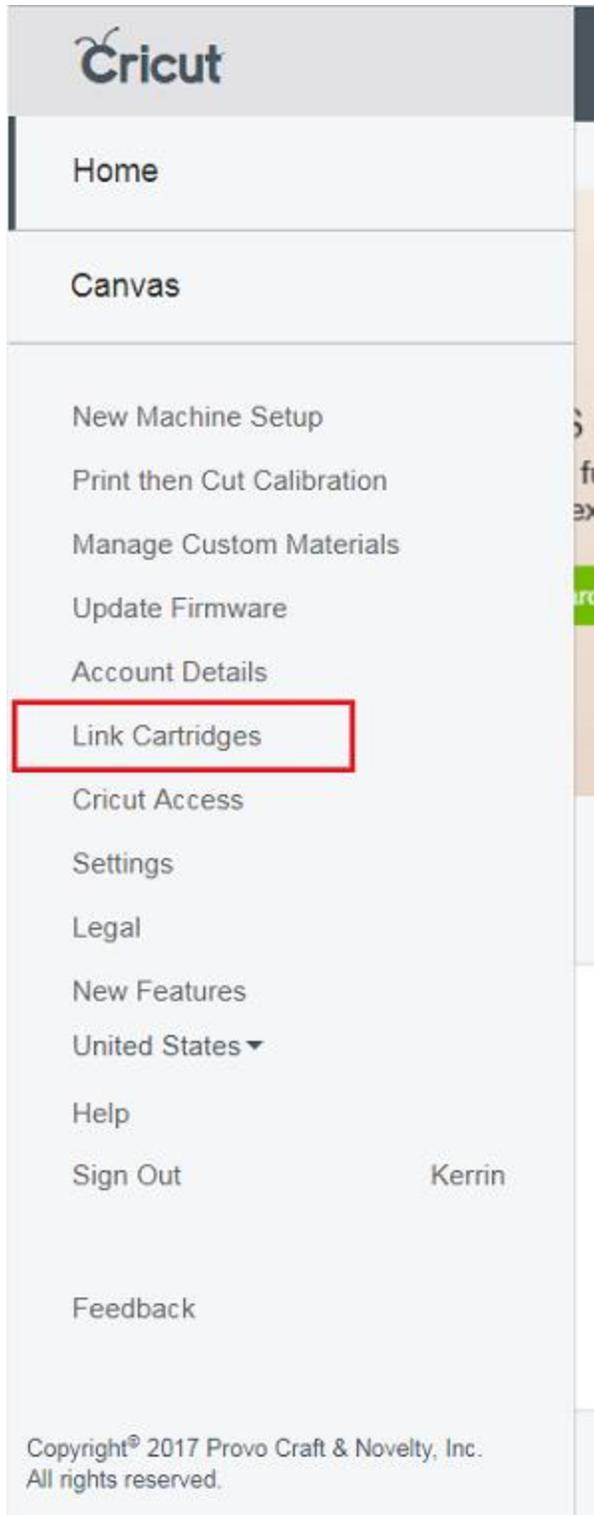


4. Select your device from the drop-down menu. Cartridge adapters will show up in the list as **Adapter**.

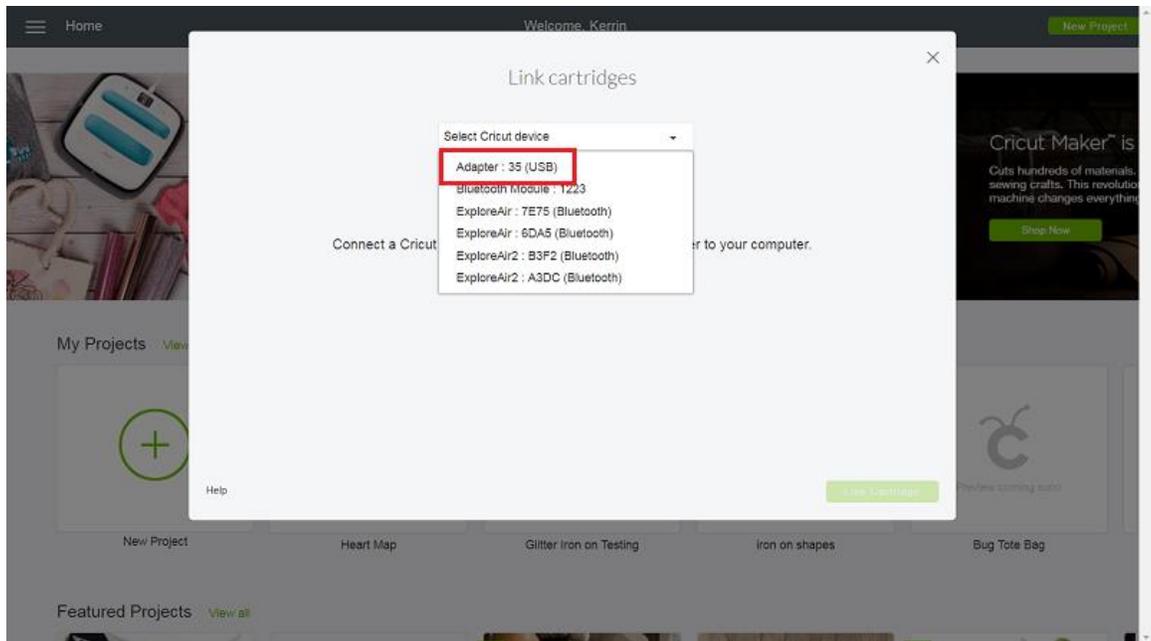


5. When instructed, insert the cartridge into the Explore cartridge port on the left side of the machine above the **Open** button, or plug your cartridge into the adapter. After a few moments, Design Space will detect the cartridge.

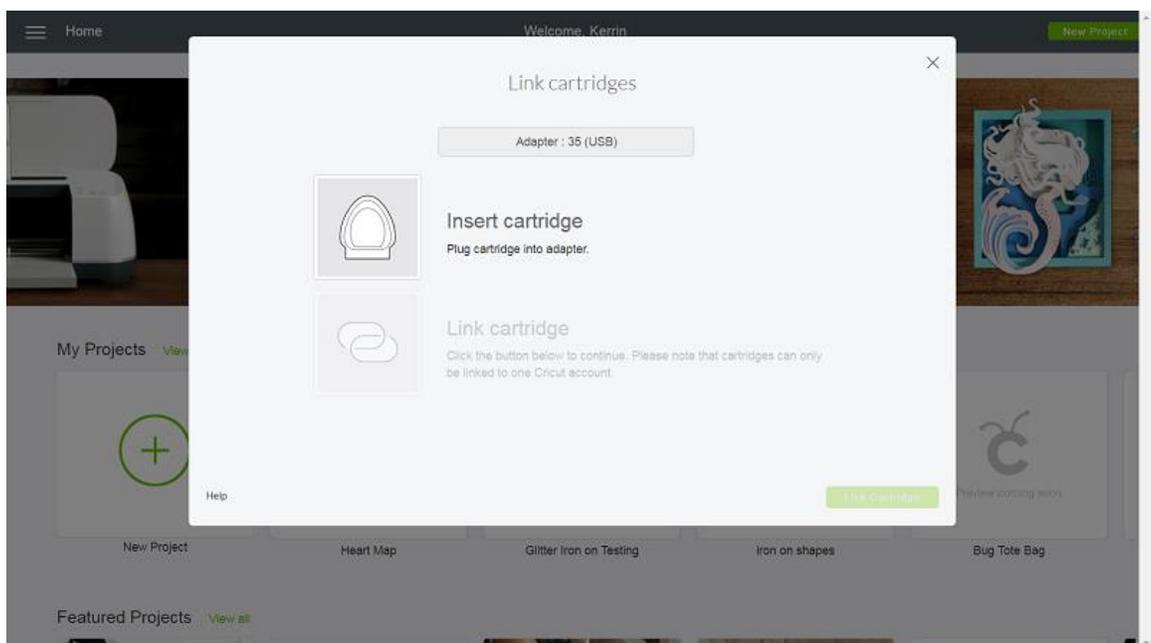

6. When the cartridge has been detected, the **Link Cartridge** button will be enabled. Click the button to initiate the linking process.

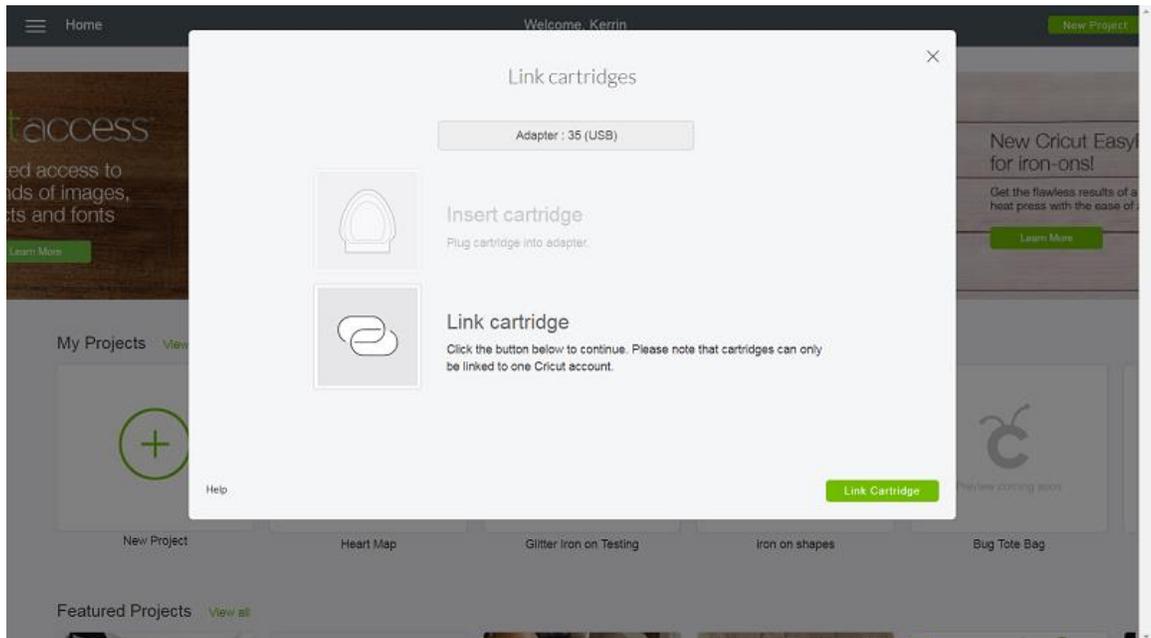

7. Design Space will alert you when the link is complete. Remove the cartridge from the machine or adapter. Then you can continue to link other cartridges, view your cartridges, or click the X in the upper right corner of the cartridge linking window to return to Home or Canvas.

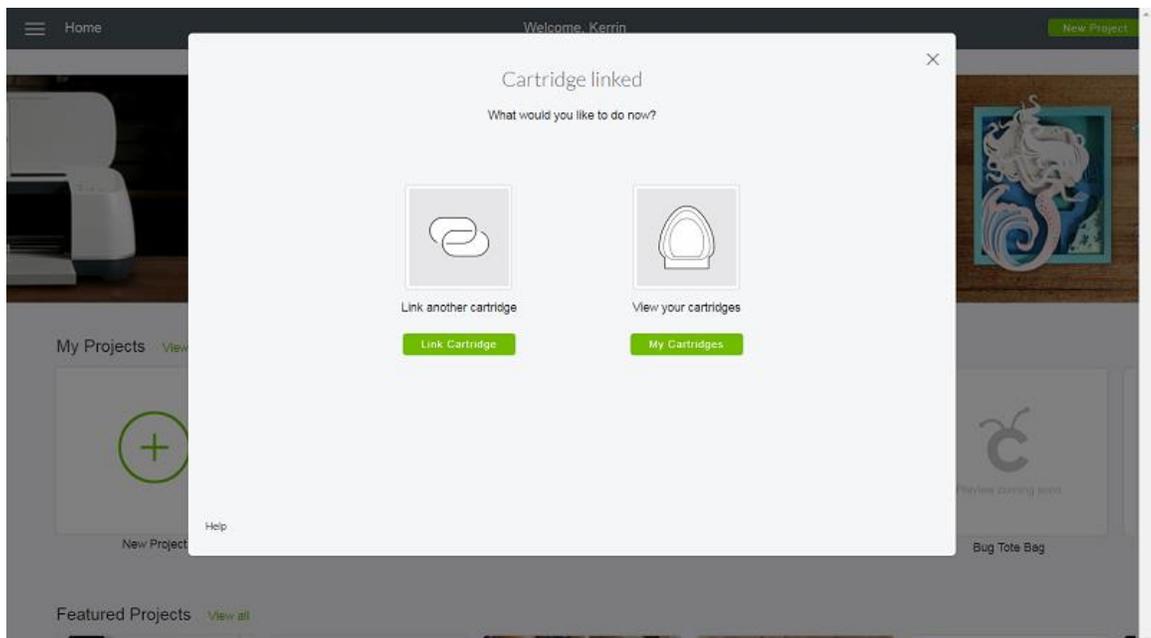

**Important:** If you have already linked your cartridges to your account through the Cricut Craft Room software, they will automatically be available in your Design Space account. There is no need to relink them. If your cartridges are linked to a Cricut Gypsy mobile device, please contact Member Care through one of the options below for assistance.

**Note:** Do not insert Cartridge Adapter into the USB port on the Cricut Maker. That port is for charging devices only; it is not intended for data transfer. If you receive any errors when linking cartridges, please follow the suggestions in this [Troubleshooting Linking Cartridges Help article](#).